




The Troll[®]

PANEL HANDLER

MADE IN THE USA BY Telpro Inc. GRAND FORKS ND
PATENT COVERED BY ONE OR MORE OF THE FOLLOWING (5,988,659 6,032,966 6,241,297)

Model 112

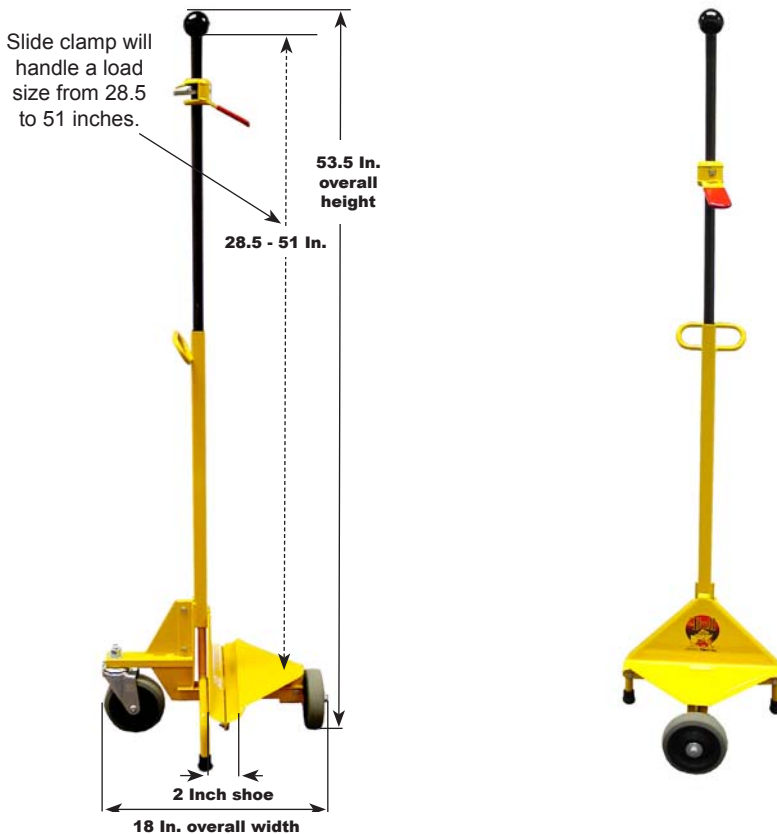

The Troll[®] Panel Handler Model 112 makes light work of hustling drywall, plywood and other heavy building panels around the work site. Its unique design locks the load vertically for easy mobility. Patented omni-directional design makes fast, safe handling of building loads in tight quarters a snap.


The 250 lb. capacity hauls 4 sheets of half-inch board as well as large banquet tables and solid core doors.

1ST



Unpack box and check for assembly components. (You will need two 7/16 wrenches)

1. UPRIGHT FRAME
2. WHEEL BASE
3. FLOOR PLATE
4. LEG PIPE
5. SLIDE PIPE with SLIDE CLAMP ASSEMBLY
6. HARDWARE

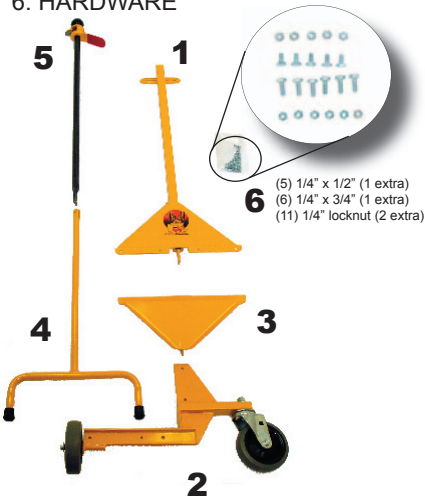

2ND




Insert the SLIDE PIPE assembly into the UPRIGHT FRAME with the KNOB and CLAMP at the handle end of the UPRIGHT FRAME.

3RD



Begin by clipping the LEG PIPE onto the SLIDE PIPE in the UPRIGHT FRAME assembly. Clip the two pieces fully together and slide the leg assembly fully into the UPRIGHT FRAME.

4TH

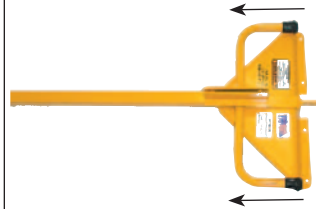


Retract the LEG ASSEMBLY into the UPRIGHT FRAME before proceeding to the next step.

5TH



Attach the WHEEL BASE, aligning the holes as shown.

6TH

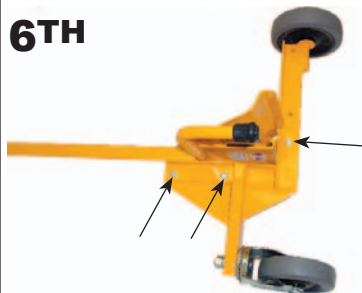

Fasten the wheel base to the UPRIGHT FRAME using three 1/4" x 3/4" bolts and 1/4" lock nuts. Finger tighten only at this time.

9TH




Fasten the FLOOR PLATE to the UPRIGHT FRAME using four 1/4" x 1/2" bolts and 1/4" lock nuts. Inserting the bolts will be easier if done in the order shown. Tighten these bolts securely using wrenches and do the same for all other bolt assemblies that are still only finger tightened.

7TH




Attach the FLOOR PLATE to the WHEEL BASE.

8TH

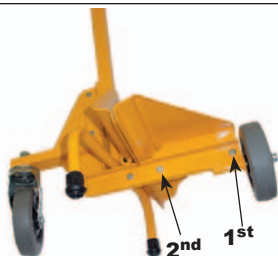


Fasten the FLOOR PLATE to the WHEEL BASE using two 1/4" x 3/4" bolts and 1/4" lock nut. Inserting the bolts will be easier if done in the order shown. Finger tighten only at this time.

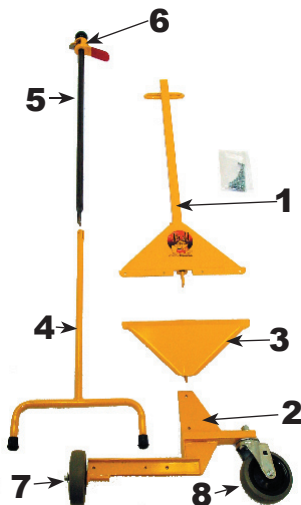

Parts Breakdown

1. 45-00 UPRIGHT FRAME
2. 45-01 WHEEL BASE ASSEMBLY (with fasteners)
3. 45-02 FLOOR PLATE (with fasteners)
4. 45-03 LEG PIPE
5. 45-04 SLIDE PIPE (with knob)
6. 45-05 SLIDE CLAMP (with fasteners)
7. 45-06 5" WHEEL (with fasteners)
8. 45-07 5" CASTER (with fasteners)

Using the Troll® Model 112

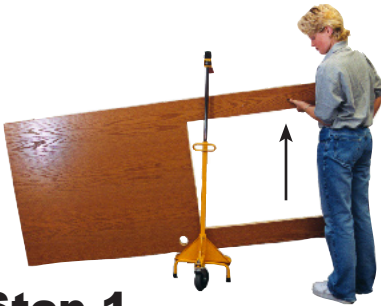

Step 1

Position the Troll® in the middle of the load with the SLIDE CLAMP up and the LEG PIPE down. Lift one end of the load and place it in the shoe of The Troll®.



Step 4

You're now ready to roll.



Step 2

Move the SLIDE CLAMP down on the SLIDE POLE to secure the load.



Step 5

Just tilt the Troll® back on the swivel caster, pull it away from the wall and you're off. You can use this same tilting action to position the Troll® for easy off-loading when you reach your destination.



Step 3

Hold the SLIDE CLAMP down with one hand and use your other hand to pull up on the SLIDE POLE. This raises the stand.

If you have questions about your Troll® Model 112, please call us toll free at 1-800-448-0222. We can also be reached on the web at www.telproinc.com or by mail at Telpro Inc., 7251 South 42nd Street, Grand Forks, ND 58201. Thank you for choosing the Troll®, we hope you're happy with your purchase.



**SAVES YOUR BACK +
SPEEDS YOUR WORK =
MAKES YOU MONEY!**

This product contains trace amounts of the following items which are known to cause cancer and/or developmental harm in the state of California.

These chemicals are not hazardous under product's intended use.

Please review CAS# for more information.

Chemical	Hazard	CAS#	% By Weight
Arsenic	Cancer	7440-38-2	Trace
Cadmium	Developmental	7440-43-9	Trace
Chromium	Cancer, Developmental	7440-47-3	Trace
Ethylbenzene	Cancer	100-41-4	Trace
Lead	Cancer	7439-92-1	Trace
Methanol	Developmental	67-56-1	Trace
Methylene Chloride (Dichloromethane)	Cancer	75-09-2	Trace
Nickel	Cancer	7440-02-0	Trace
Propylene glycol monobutyl ether	Cancer	5131-66-8	Trace
Toluene	Developmental	108-88-3	Trace

